Midmark LR Chair Mount Installation Guide [Midmark Dental Chair]

(1) Raise chair base as high as it will go; then lift seat upholstery to access components under chair seat.

(2) Secure mounting arm (1, Figure 1) to casting (2) ***[located under chair seat]*** with bolt (3) and washer (4) ***[from parts bag].***
Do not completely tighten bolt at this time.

(3) Position mounting arm (1) straight out from foot end of chair; then tighten two small hex bolts (5).

(4) Tighten bolt (3) as specified.
[Torque: 65-75 ft/lbs. (88-102 N•m)].

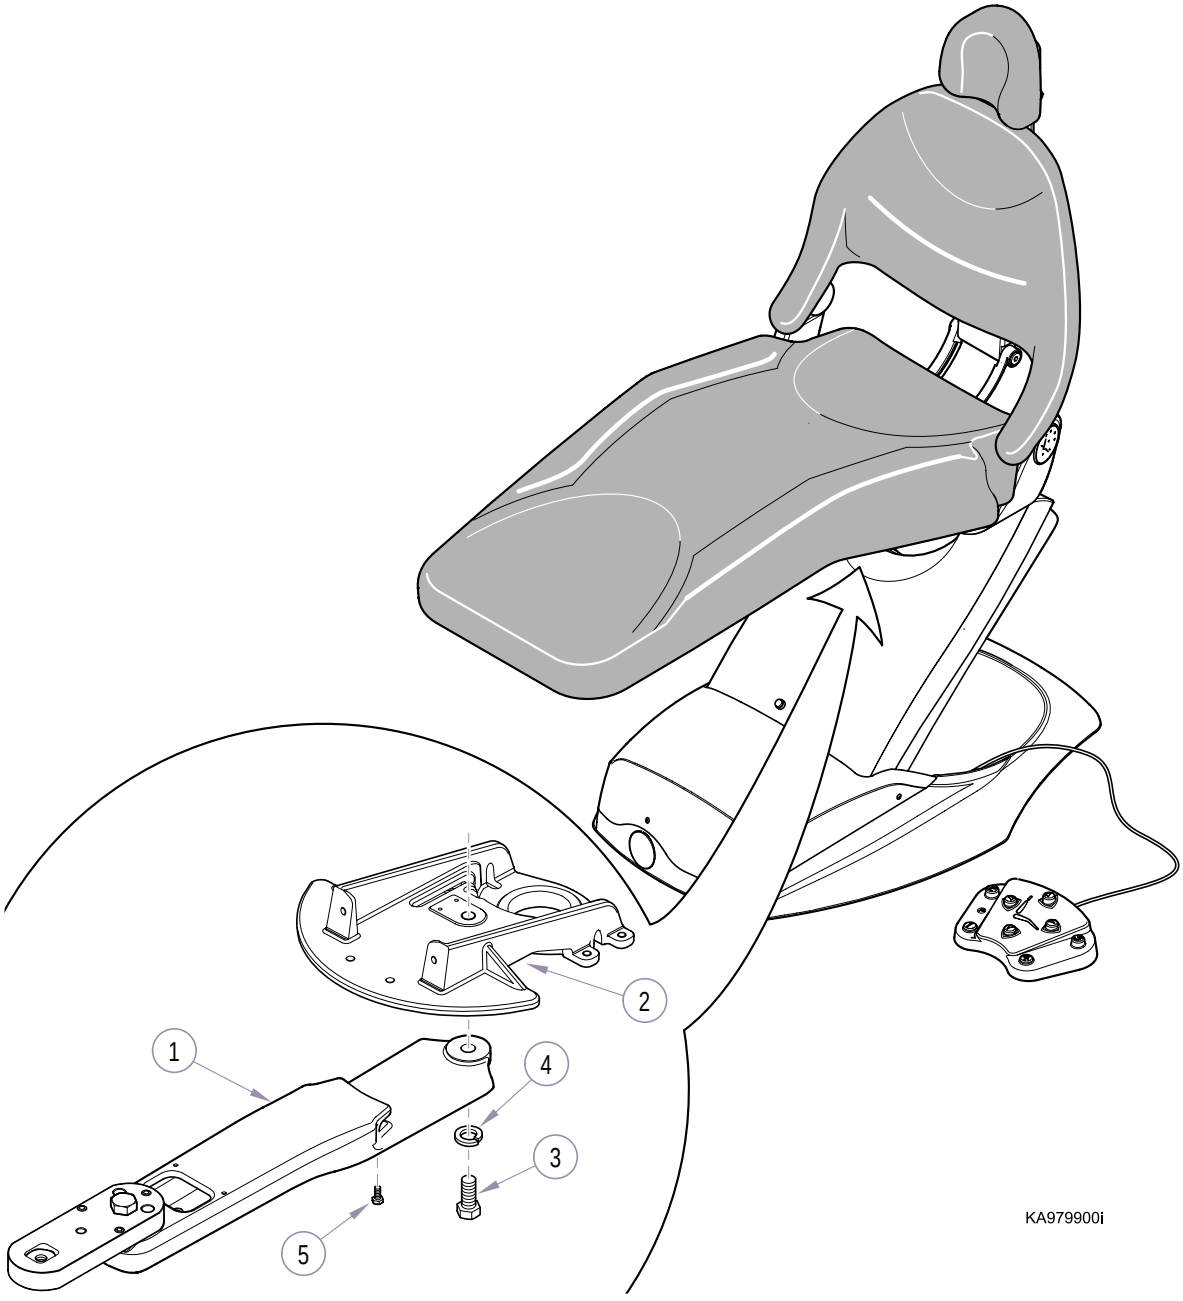

Figure 1. Mounting Arm Installation

© Midmark Corporation 2002